
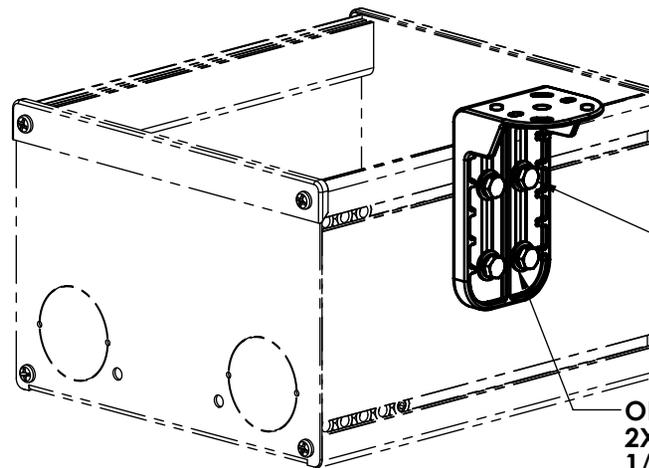


INSTALLATION:


1. ATTACH THE L-BRACKET TO (2) NUTS IN TRACK USING (2) 1/4-20 X 3/4" LONG HEX HEAD SCREWS, LOCK WASHERS, AND FLAT WASHERS. NOTE THAT L-BRACKET MAY BE ATTACHED TO OFFSET EITHER OUTBOARD OR INBOARD, AND CAN SEAT DIRECTLY ON THE EXTRUSION IF MOUNTED INBOARD.
2. ADJUST HEIGHT OF MOUNT TO DESIRED POSITION AND TIGHTEN.
3. IF IT IS DETERMINED THAT EXTRA STABILITY IS NEEDED AFTER POSITIONING, FIRST ENSURE THAT THE L-BRACKET IS LOW ENOUGH THAT THE BOTTOM OF THE SLOTS ARE BELOW THE EXTRUSION. MARK THE LOCATION OF THE THE BOTTOM OF THE SLOTS AND DRILL INTO THE SIDE PANEL. SECURE USING (2) 1/4-20X 1" LONG HEX HEAD SCREWS, LOCK WASHERS, FLAT WASHERS, AND FLANGED NUTS (NOT PROVIDED).

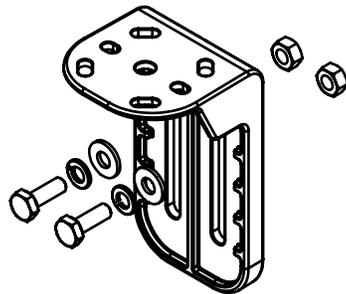

OUTBOARD MOUNTING

2X
1/4-20 X 3/4" HEX HEAD SCREW
1/4" LOCK WASHER
1/4" FLAT WASHER
1/4-20 NUT (IN CONSOLE TRACK)

OPTIONAL:
2X
1/4-20 X 1" HEX HEAD SCREW
1/4" LOCK WASHER
1/4" FLAT WASHER
1/4-20 FLANGED NUT (INSIDE CONSOLE)

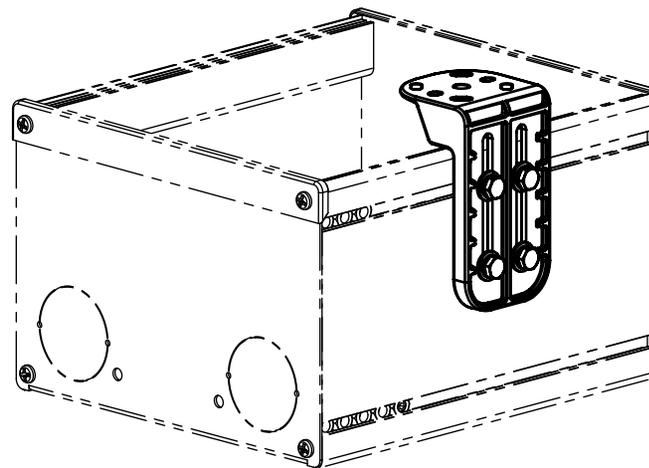

INBOARD MOUNTING

LINE	QTY.	PART NUMBER	DESCRIPTION
1	1	10-011295	BRKT, SIDE MOUNT PIVOT ARM CAST
2	2	GSM30005	NUT 1/4-20 HEX BLK, ZINC, GRD 5
3	2	GSM31005	WASHER, 1/4 FLAT ZP, BLACK
4	2	GSM31026	WASHER 1/4 LOCK ZP BLK
5	2	GSM33001	SCREW 1/4-20 x 3/4" HHCS ZP BLK

HAVIS HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: INSTRUCTIONS, L-BRACKET		
DO NOT SCALE DRAWING		
SIZE A	DWG. NO. C-LDM-0003-INST	REV 7-21
WEIGHT (LB): 4.38	SCALE: 1:4	SHEET 1 OF 1