
INSTALLATION INSTRUCTIONS:

- Review the parts list and ensure you have all parts and tools required for assembly.
- If converting another UT-2000 series product, first remove the existing side lugs and rear fences.
- Loosely assemble the new kit to the base tray as shown in the exploded view.
- Adjust and tighten the new kit according to the configuration instructions in the UT-2000 Series owner's manual or go to www.havis.com for more information.

NOTE: Retain all unused hardware for possible future re-use.

UT-2013-KIT HARDWARE CONTENTS REPLACEMENT PARTS			
1	BRACKET, HOLD DOWN LUG, EXTRA SHORT	UT-0194-SM	4
2	CAP - 0.45" X 0.5", 0.04" THK	HW-CA-0001/GSM41120	4
3	FENCE, MOLDED	UT-0199-ML	1
4	WASHER, BELLEVILLE, SERRATED, #10	HW-SW-1262/GSM31089	5
5	NUT, #10-32 X 0.375" SQUARE X 0.130"	HW-MN-0004/GSM30110	5
6	SCREW, BUTTON HEAD, PIN-IN-TORX, #10-32 X 0.5"	GSM33327	6
7	INSTALLATION INSTRUCTIONS, UT-2013-KIT	UT-2013-KIT_INST	1
OOLS			
8	L-KEY TAMPER-RESISTANT, T25, 2-13/32" L	HW-AW-0006/GSM50261	1

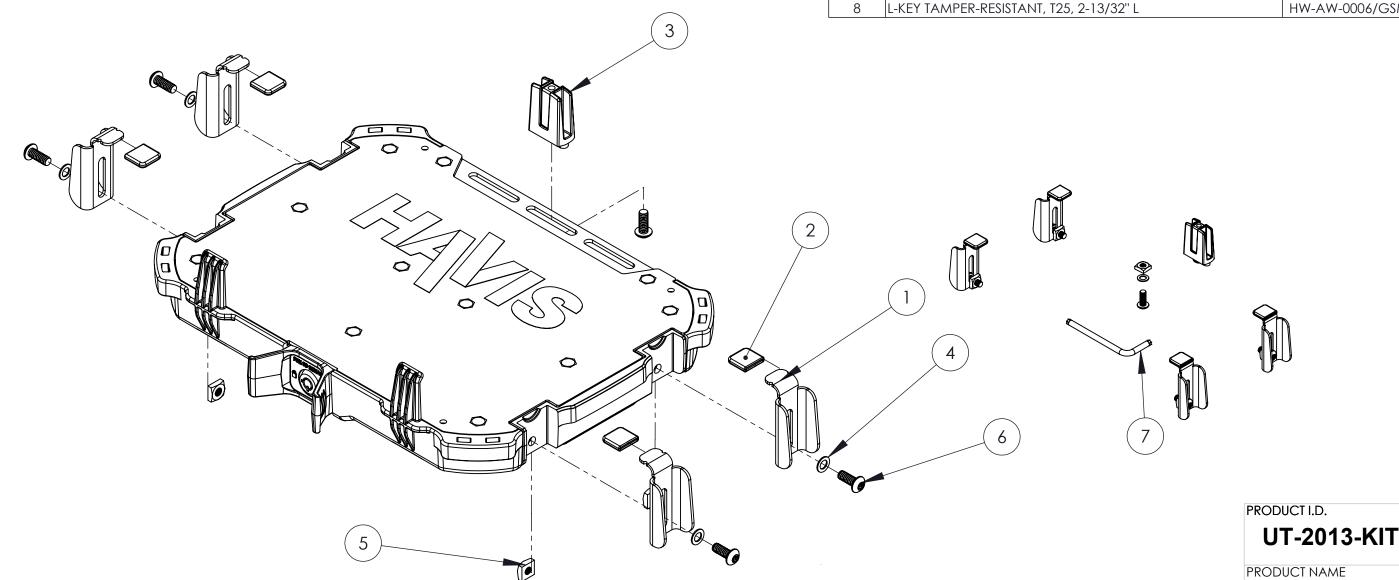

DRAWING NUMBER: UT-2013-KIT_INST_10-19 WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, PRODUCT DESCRIPTION

UNIVERSAL TRAY, UT-2000 SERIES, EXTRA SHORT LUG KIT

UT-2013 KIT, INSTALLATION INSTRUCTIONS



REV. DATE

WWW.HAVIS.COM

10-25

WEIGHT: (LBS)

DATE

10-25-19