


FIG. 1 - (PASSENGER SIDE SHOWN)

WGI-F28-1/6

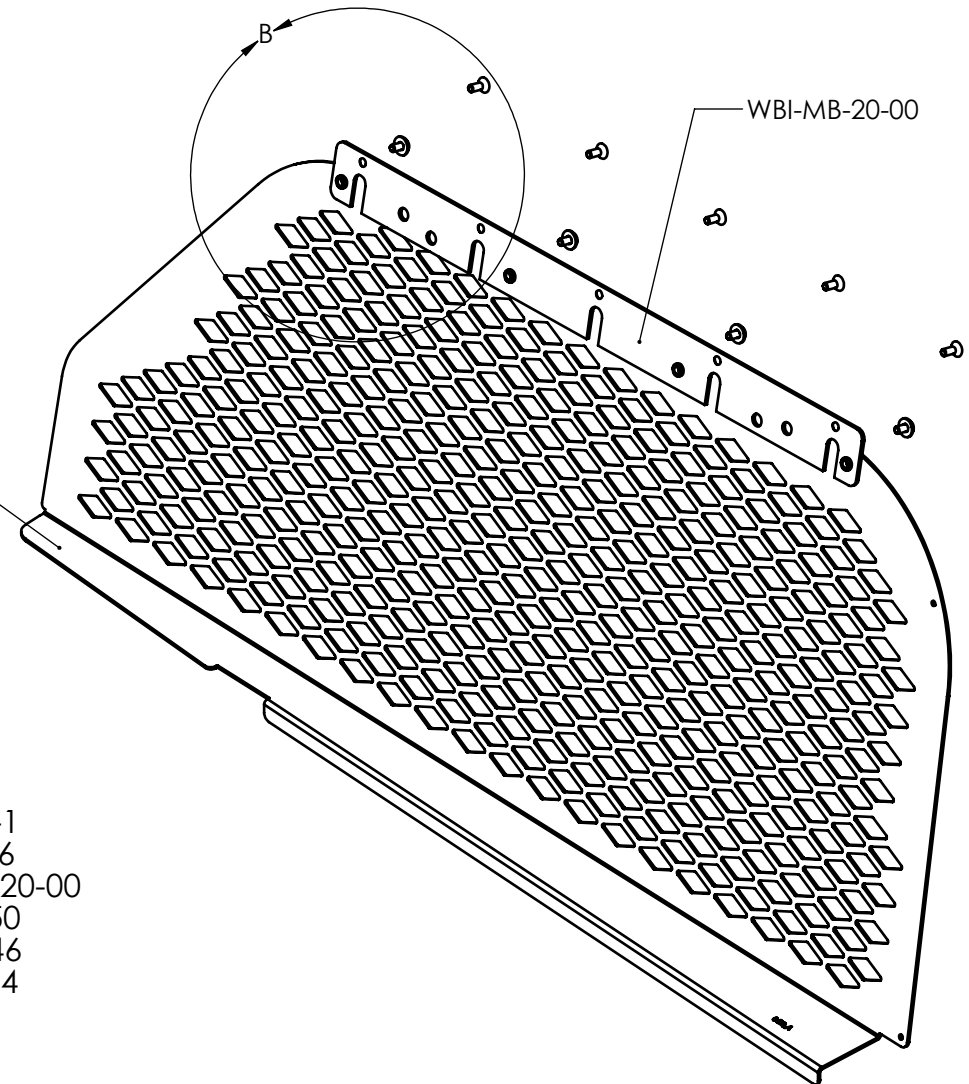

TOOLS REQUIRED:

1. POWER DRILL
2. 5/32" DRILL BIT
3. EYE SAFETY GOGGLES
4. PHILLIPS SCREW DRIVER

HARDWARE:

QTY	DESCRIPTION	PART #
1	DS WINDOW GUARD	WGI-F28-1
1	PS WINDOW GUARD	WGI-F28-6
2	UPPER GUARD MOUNT	WGI-MB-20-00
10	#10 X 1/2" LG. PHILLIPS FLAT HEAD SMS	GSM34150
8	#10 FLAT WASHER, SS	GSM31046
8	#10/32 X 3/8" LG PHILLIPS HEAD MS, SS	GSM33214

INSTALLATION INSTRUCTIONS:

1. PRE-ASSEMBLE EACH PASSENGER SIDE AS SHOWN, DRIVER SIDE IS THE OPPOSITE.
2. OPEN DOOR AND POSITION THE GUARD TO CONTOUR AROUND DOOR PANEL AND HOOK THE BOTTOM FLANGE BETWEEN THE PANEL AND RUBBER.
3. WITH GUARD POSITIONED, MARK THE UPPER DOOR FRAME USING UPPER BRACKETS FIVE MOUNTING HOLES AS A GUIDE.
4. REMOVE WINDOW GUARD, AND DRILL THE MARKED HOLES USING # 5/32 DRILL BIT.
5. RE-POSITION WINDOW GUARD AND ATTACH USING SUPPLIED HARDWARE.
6. TO CLEAN WINDOWS, UNSCREW GUARD FROM UPPER BRACKET.

HAVIS HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: INSTALL INSTRUCTION, WGI, 2020 FORD, INUT, REAR DOOR		
DO NOT SCALE DRAWING		
SIZE A	DWG. NO. WGI-F28-INST	REV 3/20
WEIGHT (LB): 6.8124	SCALE: 1:8	SHEET 1 OF 1