
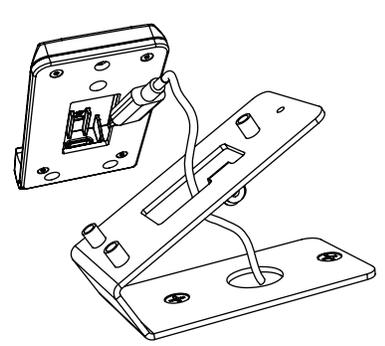




1. MARK MOUNTING HOLE LOCATIONS AND ATTACH TO COUNTER USING 2X PROVIDED WOOD SCREWS (OPTIONAL) DRILL .75" HOLE IN COUNTER TO ROUTE CABLE THROUGH STAND/COUNTER

ROUTE USB-C CABLE PROVIDED WITH VERIFONE E285 THROUGH THE STAND AND PLUG INTO PLASTIC SLED

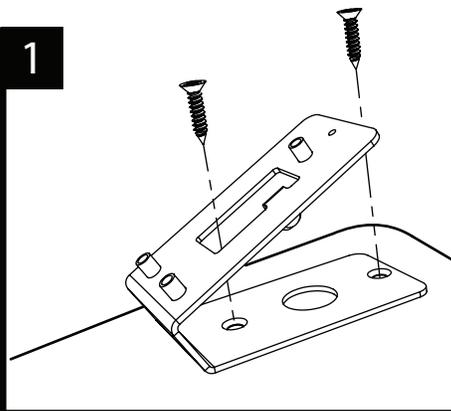



2. ASSEMBLE PLASTIC SLED TO STAND AND SECURE USING PROVIDED 3X 6-32 PHILLIPS FLAT HEAD SCREWS

SECURE CABLE IN PLACE BY USING PROVIDED CABLE CLIP AND 4-40 PHILLIPS SCREW

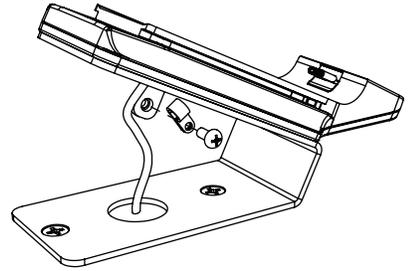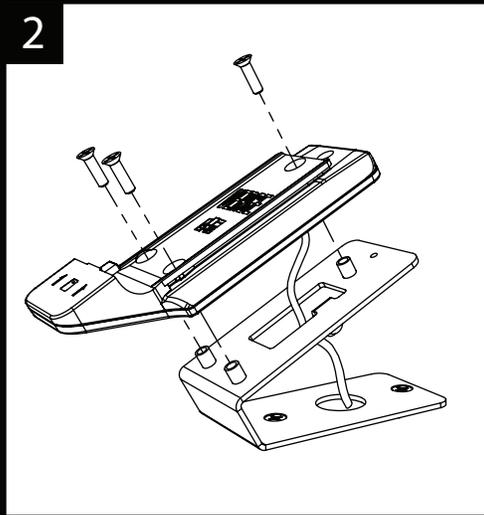

3. INSTALL VERIFONE E285 INTO ENS PROVIDED BATTERY COVER AND SECURE USING PROVIDED M3 X 4MM SCREW

SLIDE VERIFONE E285 ONTO STAND

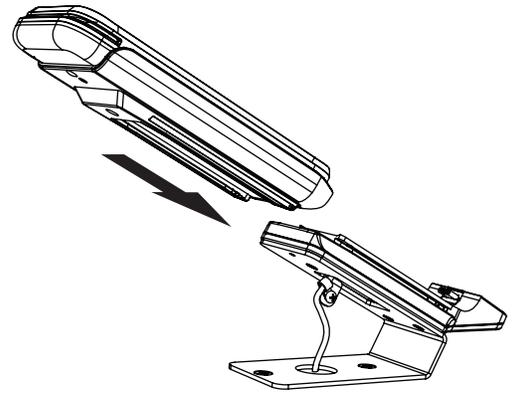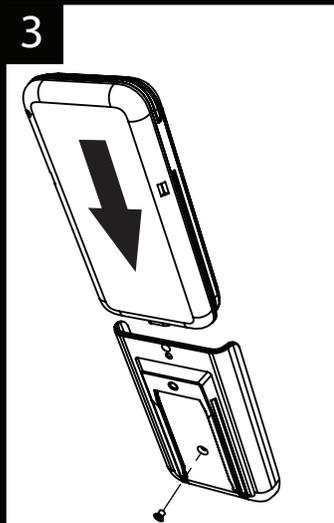

4. REMOVE VERIFONE E285 FROM STAND BY SLIDING DEVICE AWAY FROM STAND

(OPTIONAL) INSTALL PROVIDED 6-32 BUTTON HEAD SCREW TO DISABLE QUICK RELEASE FEATURE USE 5/64" HEX WRENCH TO TIGHTEN SCREW

